

## (Fold Inward) - - - - - ▶

## (Back Cover)

## (Front Cover)

### Using the USB Power Output

Plug the USB connector of your device's charging cable (*not included*) into the USB power output port on the speaker. Your device will begin charging when the speaker is powered ON or leaves standby mode, and will stop charging when the speaker is powered OFF or enters standby mode.

### Using the Microphone


Plug the 1/4" connector of the wired microphone into one of the microphone input ports on the top of the speaker. Switch the mic ON.

- Adjust mic echo or volume using the [MIC ECHO] and [MIC VOL] dials on the speaker.
- Adjust microphone echo using the [Echo] dial on the speaker.
- Adjust overall speaker volume with the [Volume] dial on the speaker or the [VOL-] and [VOL+] buttons on the remote control.
- Press the [FIRST] button on the speaker or the [M.FIRST] button on the remote control to turn Microphone Priority ON or OFF. When Mic Priority is on, the speaker will automatically lower the music when you sing into the microphone.

**Note:** In order to avoid loud feedback, keep the microphones behind the speaker and pointed away from the speaker, and switch them off when not in use.

### Using the Remote Control

- [ON] Button: Enter or leave standby
- [CD] Button: Switch input mode
- [FACE LIGHT] Button: Press to switch face light mode, press + hold to turn face lights ON/OFF
- [MUTE] Button: Mute or unmute audio
- [SPK. LIGHT] Button: Press to switch speaker light mode, press + hold to turn speaker lights ON/OFF
- [BASS] Button: Adjust bass
- [M.FIRST] Button: Turn mic priority ON/OFF
- [TREBLE] Button: Adjust treble
- [VOL-] and [VOL+] Buttons: Adjust volume
- [HI] Button: Pause and resume playback
- [◀] and [▶] Buttons: Skip tracks
- [◀] and [▶] Buttons: Fast forward or backward
- [EQ] Button: Switch between EQ modes
- [M.BASS] Button: Turn Mega Bass ON/OFF
- [0-9] Number Buttons: Select a track
- [REPEAT] Button: Repeat one or all tracks
- [UNPAIR] Button: Disconnect a Bluetooth pairing

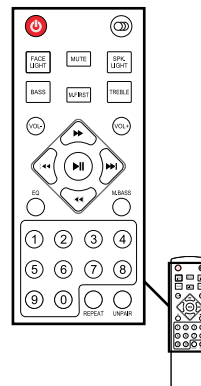

### Using Mega Bass, EQ & Tone

- You can adjust the speaker's sound by using the buttons on the speaker or the remote control.
- Press the [Mega Bass] button on the speaker or the [M.BASS] button on the remote control to turn Mega Bass ON or OFF. The speaker's LED screen will display "Bass" or "OFF".
- Press the [EQ] button on the speaker or remote control to switch between EQ modes such as Rock, Pop and Jazz. The LED display will show the current EQ mode.
- Press the [Tone] button on the speaker to switch between adjusting volume (V), bass (B) and treble (T) and use the [Volume] dial to adjust, or use the [BASS], [TREBLE] and [EQ] buttons on the remote control. The LED display will show the mode or level.

### Important Safety Instructions



- Warning**  
To reduce risk of electric shock, and to ensure safe and proper use, read all safety information before using the device.
- This AC power plug is made to Chile/EU standards that operates on AC current at 220 ~ 240 Volts 50 Hz.
  - THIS IS NOT A TOY. Please keep away from children and pets.
  - Follow all instructions. Read all warnings.
  - For indoor use only.
  - Do not use with manufacturer-approved accessories, and supplies.
  - Do not expose the unit to extreme temperatures (heat or cold), open flames, humid conditions, or wet conditions.
  - Keep away from rain and moisture. Do not submerge in water.
  - Never operate or handle the product or plug with wet hands.
  - Clean only with a dry cloth.
  - Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
  - Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
  - Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
  - Protect the power cord from being walked on or pinched particularly at plug convenience receptacles, and the point where they exit from the apparatus.
  - Unplug during lightning storms or when unused for long periods of time.
  - Do not open or attempt to repair the unit yourself should it not be working.
  - Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged or wires are exposed; liquid has been spilled or objects have fallen into the apparatus; the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
  - WARNING: The mains plug is used as a disconnect device, the disconnect device shall remain readily operable.
  - WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing, and objects filled with liquids, such as vases, shall not be placed on apparatus.

**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN

**CAUTION:** To reduce the risk of electric shock, do not open the device, there is no party inside for the user. Refer all servicing to qualified personnel.

The lightning with the arrow symbol in the triangle is a warning sign alerting the user to "dangerous voltage" inside the unit.

The exclamation point in the triangle is a warning alerting you to important safety instructions that must be followed carefully.

The Caution mark is located at the back of the device.

#### IMPORTANT

- The use of apparatus in moderate climates.
- The Marking plate is located at the back of the device.
- Make sure to have a minimum distance of 5 cm around the unit for sufficient ventilation.
- Ensure that the ventilation openings is not covered with items such as newspapers, tablecloths, curtains, etc.
- Do not place naked flame sources, such as lighted candles on the apparatus.
- Do not expose this appliance to dripping or splashing water.
- Do not place objects filled with liquids, such as glass, vase on the device.
- Do not throw batteries into fire! Respect the environment when disposing of used batteries.
- Batteries should not be exposed to excessive heat such as sunshine, fire or other similar heat source.
- The power plug is used as a disconnect device and must be easily accessible. To be completely disconnected from the power, the plug of the appliance should be disconnected completely. The socket must not be obstructed and should be easily accessible during intended use.
- Under the influence of fast transient and / or electrostatic electric phenomenon, the product may malfunction and the user must perform a power reset of the device.

In the future, you need to get rid of this product, please note that Waste electrical products should not be disposed of with household waste. Recycling facilities exist. Check with your municipality or ask your dealer for advice. (Directive for Waste Electrical and Electronic Equipment)

### Warranty Information

#### 6-Month Limited Warranty

For technical service on this product, please contact:



Servicio al Cliente  
Fono: 02-23410466  
Av. Italia 1729, Nuñoa  
info@sgservicios.cl  
www.sgservicios.cl



Have questions? We've got answers.  
Visit us at [www.sgservicios.cl](http://www.sgservicios.cl)



©2020. All rights reserved.

Polaroid, Polaroid Color Spectrum and Polaroid Classic Border Logos are trademarks of PLR IP Holdings, LLC, used under license. PLR IP Holdings LLC, does not manufacture this product or provide any manufacturer's warranty or support.



PBT9065  
LED Wireless Party Tower

User Manual

### Before You Begin...

#### READ CAREFULLY AND KEEP THIS MANUAL

**ATTENTION**  
Danger of explosion if battery is not replaced correctly. Replace only with the same or equivalent type.


- Caution**  
To ensure safe and proper use, read all safety information before using the device. Only use with manufacturer-approved batteries, chargers, accessories, and supplies.
- THIS DEVICE IS NOT A TOY, keep away from children and pets.
  - Do not disassemble, modify, or repair the device.
  - Do not use appliance for other than intended use.
  - Do not operate unattended.
  - Do NOT put fingers or hands into the product.
  - Do not expose to extreme temperatures (heat or cold), open flames, humid, or wet conditions.
  - Do not submerge in water.
  - Do not allow the USB port or the connectors of the supplied USB cable to be exposed to dust or water, or to come into contact with any conductive materials such as liquids, metallic powders, etc.

- In the Box
- PBT9065 - Wireless Speaker (x1)
  - Power Cord (x1)
  - Wired Microphone (x1)
  - Remote Control (x1)
  - Remote Control Batteries (x1)
  - User Manual (x1)




Designed in US  
Printed in China  
v1.12-2020

### Location of Controls

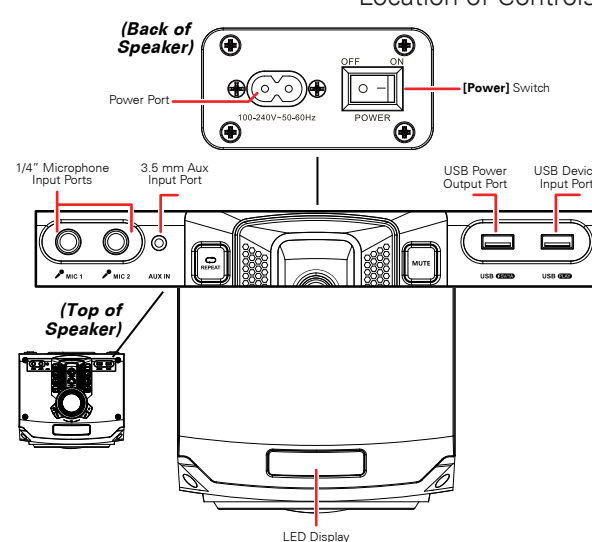

### Location of Controls (cont'd)

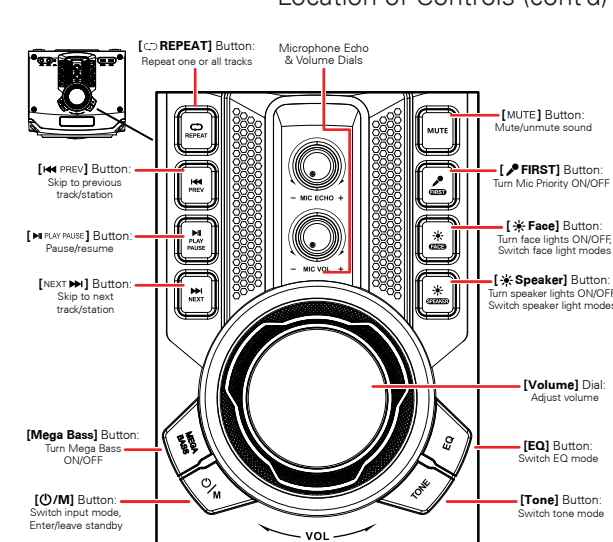

**Connecting to Power**  
Plug the pin of the included power cord into the power port on the back of the speaker. Plug the other end into an electrical socket.

When the speaker is connected to power, it will enter standby mode.

#### Turning ON/OFF

- Connect the speaker to power.
- To exit standby mode, press the [ON/M] button on the speaker or the [ON] button on the remote control.
- To enter standby mode, press and hold the [ON/M] button on the speaker or press the [ON] button on the remote control.

#### Switching Input Modes

Press the [ON/M] button on the speaker or the [CD] button on the remote control to switch between input modes. The speaker's LED screen will indicate the current input mode.

You must have a USB device inserted or a 3.5 mm auxiliary cable connected to switch to USB or AUX input mode.

### Getting Started

#### Bluetooth Pairing

- Power the speaker ON. The speaker will enter Bluetooth pairing mode and the LED screen will display "bt."
- Set your mobile device to search for Bluetooth devices. When it appears, select PBT9065 from the list of found devices.
- After a successful pairing, a voice will be heard and you will be able to play music on the speaker.

In Bluetooth mode, volume and playback can be adjusted with your paired device, or with the controls on the speaker or remote control listed below.

- To skip tracks, press the [◀ PREV] and [NEXT ▶] buttons on the speaker or the [◀] and [▶] buttons on the remote control.
- To pause and resume playback, press the [▶ PLAY/PAUSE] button on the speaker or the [▶] button on the remote control.
- Press and hold the [▶ PLAY/PAUSE] button on the speaker or press the [UNPAIR] button on the remote control to disconnect a Bluetooth pairing. A voice will be heard, and the speaker will re-enter Bluetooth mode.

#### Adjusting Volume & Playback

- Use the [◀ PREV] and [NEXT ▶] buttons on the speaker and [◀] and [▶] buttons on the remote control to skip tracks in Bluetooth and USB modes.
- In Bluetooth and USB modes, press the [▶ PLAY/PAUSE] and [▶] buttons to play /pause.
- Skip tracks and play/pause in AUX mode using your connected device.
- In all modes, volume can be adjusted with the [Volume] dial on the speaker.
- In Bluetooth and AUX modes, volume can also be adjusted with the controls on your connected device.
- In any mode, press the [MUTE] button on the speaker or remote control to mute and unmute audio.

#### Using the FM Radio

Switch to FM radio mode. The display screen will show the current FM frequency.

All radio functions are controlled by the buttons on the speaker or remote control.

- Press and hold the [▶ PLAY/PAUSE] (speaker) or [▶] (remote control) to start or stop automatically scanning and saving available radio stations. If not stopped, it will make a complete scan and return to the first saved station.
- Press the [◀ PREV] and [NEXT ▶] buttons (speaker) or [◀] and [▶] buttons (remote control) to flip through saved stations.
- Press + hold the [◀ PREV] and [NEXT ▶] buttons (speaker) or [◀] and [▶] buttons (remote control) to manually scan for stations.

#### Using the AUX Input

Plug one end of a 3.5 mm aux cable (*not included*) into the 3.5 mm AUX port on the top of the speaker. Plug the other end into the headphone jack or audio output port on your device.

If the speaker does not automatically switch to AUX input, switch to AUX input using the [ON/M] button on the speaker or the [CD] button on the remote control.

In AUX mode, all functions will be controlled by the your connected device.

#### Using the USB Input

Insert a USB device into the USB device input port on the speaker. The speaker will automatically switch to USB input mode. The LED screen will indicate USB mode, and the speaker will automatically begin playing music off the device.

**Note:** To listen to music on your USB device, you may need to have files stored in the root folder of the device. Check your USB device's manufacturer information for more details.

In USB mode, all functions will be controlled with controls on the speaker or remote control listed below.

- Skip tracks using the [◀ PREV] and [NEXT ▶] buttons on the speaker or the [◀] and [▶] buttons on the remote control.
- Pause and resume playback using the [▶ PLAY/PAUSE] button on the speaker or the [▶] button on the remote control.
- Repeat one track or all tracks using the [REPEAT] button on the speaker or the [REPEAT] button on the remote control.

#### Using the LED Lights

The LED lights will automatically turn ON when the speaker is powered on.

- Press the [Speaker] button on the speaker or the [SPK. LIGHT] button on the remote control to flip through speaker LED light modes. Multiple LED modes will react to the beat of your music. For best results, turn up the volume.
- Press and hold the [Speaker] button to turn the speaker LED lights ON or OFF.
- Press the [Face] button on the speaker or the [FACE LIGHT] button on the remote control to flip through face LED light modes.
- Press and hold the [Face] button to turn the face LED lights ON or OFF.