

Polaroid



PBT9071

Light Show Karaoke Speaker

User Manual

Before You Begin...

READ CAREFULLY AND KEEP THIS MANUAL

Customer Support

For any questions or problems with your product, please visit our website at customersupport123.com.

 
Caution

To ensure safe and proper use, read all safety information before using the device. Only use with manufacturer-approved batteries, chargers, accessories, and supplies.

- **THIS DEVICE IS NOT A TOY**, keep away from children and pets.
- Do not disassemble, modify, or repair the device.
- Do not expose to extreme temperatures (heat or cold), open flames, humid, or wet conditions.
- **Do not submerge in water.**
- Low power may cause poor Bluetooth connection or sound distortion.
- Do not overcharge battery.
- If using with a USB adapter, make sure the adapter is not damaged.
- Do not allow the USB port or the connectors of the supplied USB cable to be exposed to dust or water, or to come into contact with any conductive materials such as liquids, metallic powders, etc.
- The speaker & remote control contain built-in batteries and should not be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of this device.


In the Box

- PBT9071 - **Wireless Speaker** (x1)
- 13.5V/1.3A Charging Adapter (x1)
- Wired Microphone (x1)
- Remote Control with Battery (x1)
- User Manual (x2 English & Spanish)



Location of Controls

 Top of
Speaker

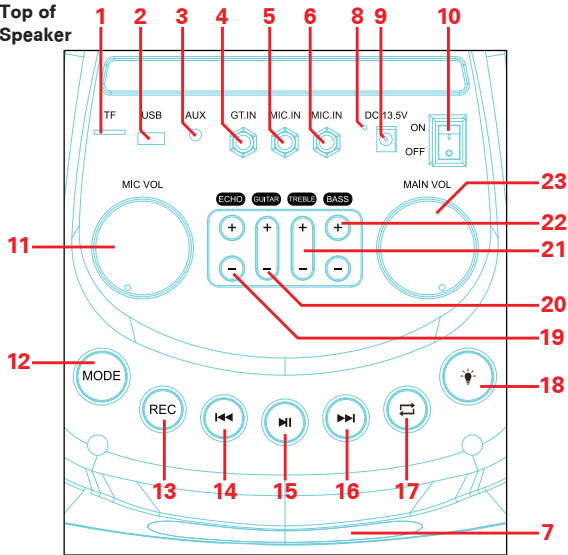


1. TF / Micro SD Card Input
2. USB Device Input
3. AUX Input Port (3.5 mm)
4. Guitar Input (GT.IN) Port (1/4")
5. Microphone Input (MIC.IN) Port (1/4")
6. Microphone Input (MIC.IN) Port (1/4")
7. LED Screen
8. Power LED Indicator
9. DC 13.5V Power Input Port
10. Power Switch: Power ON/OFF
11. Microphone Volume Dial: Adjust Volume
12. Mode Button: Switch Input Mode
13. REC Button: Start/stop recording, play back recordings
14. ⏮ Button: Skip to previous track
15. ⏸ Button: Play/pause, scan stations (FM radio mode)
16. ⏭ Button: Skip to next track
17. 🔄 Button: Replay track (TF/USB mode)
18. 💡 Button: Turn LED lights ON/OFF, change light mode
19. Echo Adjust Buttons
20. Guitar Volume Adjust Buttons
21. Treble Adjust Buttons
22. Bass Adjust Buttons
23. Overall Volume Dial

Getting Started

Charging the Speaker

 
Plug the pin of the included power adapter into the power port on the top of the speaker. Plug into a wall outlet.



The LED indicator will **light up RED** when connected to power and **turn OFF** when disconnected from power.

Powering ON/OFF

 - Flip the **[POWER]** switch to power the speaker ON/OFF.
- When powered ON, the speaker will enter Bluetooth pairing mode, and may automatically re-pair to any available previously-paired device nearby.

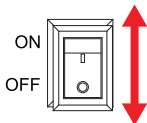

Changing Input Modes

 


Press the **Mode** button on the speaker to switch between input modes. The LED screen will indicate the mode, and a voice will be heard indicating the mode.





You must have a micro TF card or USB device inserted or AUX cable connected to switch to these modes.

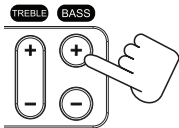Adjusting Sound

- Adjust overall volume with the Volume dial, or the controls on a connected device.
- Press the TREBLE + — buttons to adjust treble.
- Press the BASS + — buttons to adjust bass.




Controlling Playback

- Press the  and  buttons on the speaker to skip tracks or stations in Bluetooth mode, FM Radio mode, USB mode and TF card mode.
- Press the  button to pause and resume playback.
- Press the  button to repeat the current track. The LED screen will display "ONE." Press a 2nd time to repeat the playlist. The LED screen will display "ALL." Press a 3rd time to turn replay OFF.

Using the Speaker Lights

The speaker has multiple LED light modes, including a reactive one that dances to the beat of your music. For best results in the reactive mode, turn the volume up.

- Press the  button on the speaker to change LED light modes, and power the lights ON/OFF.

Bluetooth Pairing

1. Power the speaker ON. A tone will be heard and the LED screen will display the word "**BLUE.**"
2. Set your mobile device to search for Bluetooth devices. When it appears, select **PBT9071** from the found devices.
3. After a successful pairing, a tone will be heard and you will be able to play music on the speaker.

In Bluetooth mode, volume & playback can be adjusted using the controls on your paired device, or the controls on the speaker listed in the **Adjusting Sound** and **Controlling Playback** sections.

Using the AUX Input

Insert one end of a 3.5 mm auxiliary cable (*not included*) into the AUX input port on the speaker. Insert the other end into the headphone jack or 3.5 mm AUX output port on your media-playing device.

Switch to AUX mode. A voice will be heard, and the LED screen will display the word "LINE."

In AUX mode, all playback will be controlled by your connected device.

AUX



Using the FM Radio

Power the speaker ON and switch to FM mode. A voice will be heard, and the LED screen will display the current FM frequency.

If it is your first time using the FM radio, it's recommended to do a full scan of nearby stations. Press the ►|| button to start scanning and saving available stations. If not stopped, the speaker will make a full scan of all available stations, and will automatically return to the first station.

Radio functions can be controlled with the buttons on the speaker.

- Press the ►|| button to start or stop scanning and saving stations.
- Press the ◀◀ and ▶▶ buttons to flip through saved stations.

USB Device and TF Card Input

Insert a USB device, such as a USB flash drive, or TF card ("micro SD" card) into the USB or TF card input ports on the speaker.



Note: To listen to music on your USB device, you may need to have files stored in the root folder of the device. Check your USB device's manufacturer information for more details.

If the speaker does not automatically switch to the correct mode, press the Mode button until you enter USB or TF card mode. A voice will be heard indicating the mode, and the speaker will automatically begin playing music off the device.

In USB and TF mode, playback and volume adjustment will be controlled with controls on the speaker.

The speaker's recording function requires a USB device or TF card to store the recording. See the **Recording Mic Input** section of this manual for details.

Using a Microphone

Plug the 1/4" connector of a microphone into the MIC IN port on the speaker. Switch the mic ON.

- Adjust mic echo using the ECHO + — buttons on the speaker.
- Adjust mic volume using the Microphone Volume dial on the speaker.

 
Note: In order to avoid loud feedback, keep the microphone behind the speaker and pointed away from the speaker, and switch the microphone off when not in use.



Plugging In a Guitar

Plug the 1/4" connector of your guitar (not included) into the Guitar Input port on the speaker.

- Adjust guitar volume using the GUITAR + — buttons on the speaker.

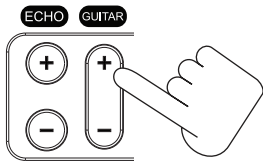

Recording Mic Input



 
 





 
 
To record microphone input, you must have a USB device or TF (micro SD) card inserted into the speaker.

1. Plug in the included microphone and switch it ON. Switch the speaker to TF/USB mode.
2. **Press + hold** the Record (REC) Button on the speaker to start recording. The LED screen will display "RECO" and the recording time elapsed.
3. **Press + hold** the Record (REC) Button to end the recording. The audio file will be saved on your USB device or TF card, and the speaker will automatically begin playing back the recording.
4. After playing back the recording, the speaker will begin playing tracks from your USB device or TF card. See below about playing back recordings.

Playing Back Recordings

- Press the Record (REC) button to begin playing back your recordings. The speaker LED screen will display "REPLAY."
- Playback of recordings can be controlled using the ►►, ◀◀, ►► and ◀◀ buttons.
- Press the Record (REC) button to stop playing back recordings. The speaker will return to playing tracks off your USB device or TF card.

Remote Control

-  Button: Enter/exit standby
-  Button: Change LED light mode
-  Button: Change input mode
-  Button: Play/pause
-  Button: Skip to previous track/station
-  Button: Skip to next track/station
-  Button: Mute/unmute audio
-  Button: Decrease volume
-  Button: Increase volume
-  Button: Change EQ mode
(EQ modes:
 1. Bass 80% and treble 20%
 2. Bass 70% and treble 30%
 3. Bass 60% and treble 40%
 4. Bass 50% and treble 50%
 5. Bass 30% and treble 70%
 6. Bass 20% and treble 80%)
-  Button: Enter USB/TF mode
- Numbers 0-9: Select track (*To select a track #10 or higher, press the numbers quickly.*)



Note: You may need to remove the plastic tab from the remote control's battery compartment in order to use.

Compliance Information

FCC Information

This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radiation Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

WARNING Li-ion Battery Inside

This product is fitted with a Li-ion battery. Do not damage, open, or dismantle the battery and do not use it in damp and/or corrosive conditions. Use only with compatible chargers. Never dispose of batteries in a fire, and never expose them to high temperatures. Do not expose the product to temperatures exceeding 60°C (140°F).



Rating Label

Definitions



Direct current symbol.



This symbol signifies the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment.



This symbol signifies and declares that this equipment has battery charging which complies with California CEC and energy efficiency.



This symbol signifies that this is a wireless device powered by Bluetooth® technology.



This symbol represents FCC Declaration of Conformity and compliance.

Warranty Information

90-day Limited Warranty

Territory: United States/Canada

LIMITED WARRANTY TO ORIGINAL CONSUMER

This product (including any accessories included in the original packaging) as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:

To obtain warranty service:

- Visit our customer support portal: www.customersupport123.com
- Select the brand and model of your device
- Select "Service Request" and fill out the form to begin your inquiry
- Exchanges require dated proof of purchase from an authorized retailer

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

Warranty service not provided

This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR OR ITS MANUFACTURERS BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

All product names, trademarks, and registered trademarks are property of their respective owners. All company, product, and service names used in this document are for identification purposes only. Use of these names, trademarks, and brands does not imply endorsement.

Designed in US
Printed in China
v1. 10-2021

Polaroid



Have questions? We've got answers.

Visit us at customersupport123.com



Instantly recognizable. Instantly reassuring. The Polaroid Classic Border and Polaroid Color Spectrum logos let you know you've purchased a product that exemplifies the best qualities of our brand and that contribute to our rich heritage of quality and innovation.

©2021. All rights reserved.

Polaroid, Polaroid Color Spectrum and Polaroid Classic Border Logo are trademarks of PLR IP Holdings, LLC, used under license. PLR IP Holdings LLC, does not manufacture this product or provide any manufacturer's warranty or support.