# (Fold Inward) — — — **▶**

(Back Cover)

(Front Cover)

### Bluetooth Pairing Connect the system to power, and power ON. Enter Bluetooth mode. The screen on the front of the soundbar will display "bLUE." 2. Set your mobile device to search for Bluetooth devices. When it appears, select **PBT9076** from the list of found devices. 3. After a successful pairing, a tone will be heard and you will be able to play music on the sound system. In Bluetooth mode, playback & volume can be controlled by your paired device, by the buttons on the speaker, or by the remote control. Using the RCA Ports 1. Plug the red and white connectors of the included RCA cable into the corresponding ports on the back of the 2. Plug the AUX (smaller) connector into the headphone Using the HDMI (ARC) Port jack or AUX output port on your media-playing device 3. Switch to RCA mode. The soundbar will display "LINE." 1. Plug your device's HDMI (ARC) jack (not included) into the HDMI (ARC) port on the back of the soundbar. Note: You can connect any device with RCA jacks by plugging them into the RCA ports on the of the soundbar will display "ArC." Using the AUX Port 1. Plug one connector of the included AUX cable into the AUX port on the back of the soundbar. the back of the soundbar. 2. Plug the other connector into the headphone jack or AUX output port on your media-playing device.

## Using the Optical Input Port

Plug one connector of the included optical cable into the optical port on the back of the soundbar. Plug the other connector into

(Back of TV/Monitor)

(Back of TV/Monitor)

 Switch to optical mode. The front of the soundbar will display "OPt."

OPTICAL cable

USB Device Input

In USB mode, playback and volume adjustment will be controlled with the buttons on the remote control. See the **Remote Control** section on the next page for details.

## Remote Control

Insert a USB device, such as a USB flash drive into the USB device input on the back of the soundbar.

Note: To listen to music on your USB device, you may need to have files stored in the root folder of the device. Check your USB device's manufacturer information for more details.

If the soundbar does not automatically switch to the correct mode, switch to USB mode using the remote control or the buttons on the speaker. The soundbar will display "USb" and the sound system will automatically begin playing music

1. O Button: Enter/exit standby

 F.VOL ▲▼ Buttons: Adjust vol. of front tone (s.bar 4. S.VOL ▲▼Buttons: Adjust vol. of sat. speakers CFN.VOI AV Buttons: Adjust center tone vol.  $\overline{ }$ 

6. SUB.VOL W Buttons: Adjust subwoofer vol. (s.ba 7. Bass AV Buttons: Adjust bass 8. Treble ▲▼ Buttons: Adjust treble

9. (1) Button: Increase overall volume 10. D Button: Decrease overall volume

. 🖊 | 📦 Buttons: Skip tracks 2. 🔰 Button: Pause/resume playback 13. BT Button: Switch to Bluetooth mode

14. ARC Button: Switch to HDMI (ARC) mode 15. LINE Button: Switch to RCA mode 16. USB Button: Switch to USB mode

17. OPTICAL Button: Switch to Optical mode 18. LED Button: Turn LED screen ON/OFF 19. MOVIE Button: Sound mode for movie watching 20. AUX Button: Switch to AUX mode

21. MUSIC Button: Sound mode for music listening 22. 2.1CH Button: Enter soundbar only mode 23. 3.1CH Button: Enter soundbar & subwoofer only

24: 5.1CH Button: Use entire sound system

Placing the Sound System

## Compliance Information FCC Information This device complies with Part 15 of the FCC Rules.

## Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

of the following measures:

- Recorrent or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced readio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions (1) This device may no cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

Radiation Exposure Information
The device has been evaluated to meet exposure condition without restriction.

### Rating Label Definitions === Direct current symbol.

Polaroid

Bluetooth This symbol signifies that this is a wireless device powered by Bluetooth® technology. This symbol signifies that the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment.

BC This symbol signifies and declares that this equipment complies with battery charging which complies with California CEC and energy efficiency.



## Warranty Information

### To obtain warranty service:

Designed in US Printed in China v1. 12-2021

# **Polaroid**

# Have questions? We've got answers.

# **Polaroid**



5.1 Home Theater Surround Sound System **User Manual** 

## Before You Begin...

## Customer Support For any questions or problems with your product, please visit our website at customersupport123.com.

To ensure safe and proper use, read all safety information before using the device. Only use with manufacturer-approved batteries, chargers, accessories, and supplies. • THIS DEVICE IS NOT A TOY, do NOT allow children or pets to use or play with

- this device.

   Do not disassemble, modify, or repair the device.
- Do not expose to extreme temperatures (heat or cold), open flames, humid, or wet conditions. Do not submerge in water.
   If using with a USB adapter, make sure the adapter is not damaged.

3. Switch to AUX mode. The soundbar will display "AUX."

 $\textbf{Note:} \ \text{You can connect any device with a 3.5 mm AUX jack by plugging it into the AUX ports on the soundbar.}$ 

- Do not allow the USB port or the connectors of the supplied USB cable to be exposed to dust or water, or to come into contact with any conductive materials such as liquids, metallic powders, etc.

  • The satellite speakers and remote control contain built-in batteries and should

• User Manual (x1)

not be disposed of with regular household waste. Please follow all local laws and regulations in disposing of this product.

### In the Box Soundbar (x1)

Subwoofer (x1)

 Remote Control w/ Battery Cell (x1) Power Adapter (x2) • 3.5 mm AUX Cable (x1)

Optical Cable (x1)

 RCA-AUX Cable (x1) Micro-USB Charging Cable (x2)
 Aluminum Bases for Sat. Speakers (x2) Slide Covers for Soundbar (x2) Screws for Soundbar (x2)

IN 18V RCA AUX IN OPTICAL IN ARC USB 1. Power Input Port 5. Optical Input Port


3. RCA Input (L)

4. Line-In (AUX) Input

2. RCA Input (R) 6. HDMI Input Port

Location of Controls


7. USB Device Input Port 8. Mounting Bracket

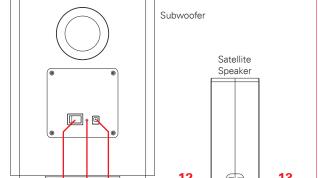


Location of Controls (cont.)

12. Sat. Speaker Power Button 9. Subwoofer Power Switch 10. LED Indicator 11. Subwoofer Power Port

13. Sat. Speaker Charging Port

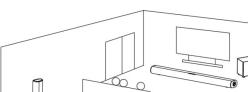

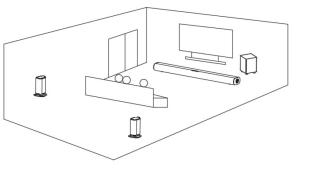

• The soundbar should be placed directly in front of you, above or below your TV • The subwoofer should be placed near the soundbar, centered or on the left or

• The two satellite speakers should go at the back of the room, one on each side.

For best results, the satellite speakers should be placed within 7 meters (23 feet) of the soundbar and subwoofer.


# Getting Started

1. Plug the micro-USB (smaller) connectors of the included USB charging cables into the charging ports on the satellite speakers.


2. Plug the USB (larger) connectors into USB power ports, such as the USB ports on a computer, or **5V USB power adapters** (not included).

3. LED indicators on the front of the speakers will light up RED while they are charging and turn OFF when they are fully charged.

Charging the Satellite Speakers

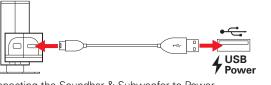

Connecting the Soundbar & Subwoofer to Power 1. Plug the pins of the included power adapters into the power ports on the soundbar and subwoofer.

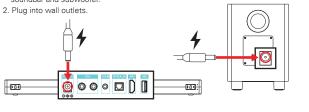

### Connecting Satellite Speakers to Soundbar (Optional) The satellite speakers can be used independently or can be attached to the ends

of the soundbar as described below. 1. Detach both caps from the ends of the soundbar.

Detach the bases from the bottoms of the two satellite speakers.

3. Screw the bottoms of the two satellites onto the two ends of the soundbar 4. You are now ready to mount the soundbar to the wall. Please store the extra bases and caps in a safe location for use later.





# Wall Mounting the Soundbar

Remove the soundbar and its contents from packaging.
 Using a pencil, mark two spots on a wall measuring 32 inches apart.

3. If installing to a wooden surface, hammer a nail, or drive or drill a mounting screw (mounting materials not included) into the wall at each marked location. If installing to drywall or a brick surface, you may need to install plastic anchors to properly secure the mounting screws.


4. Place and hang the soundbar from its mounting holes on the back onto the installed mounting nails or screws.



• Press the power ( (b)) button on the soundbar to power ON or OFF. • Press the power ( 0 ) button on the remote control to enter/exit standby mode. See the Remote Control section for details.

• Press the power buttons on the backs of the satellite speakers to power them ON/OFF. When powered ON, their LED indicators will light up BLUE, and they


Flip the power switch on the back of the subwoofer to power ON/OFF

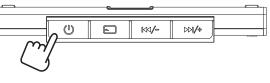

# Connecting the Sound System

 Connect the soundbar and subwoofer to power. Charge the satellite speakers. 2. Power all units ON at the same time. 3. After a moment, they will automatically connect to each other.

• Press the ( ) button on the soundbar to change input modes. • You can also select a mode using the remote control. See the **Remote Control** section for details.

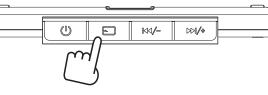

### Adjusting Volume & Playback

• Press + hold the KKI/= and DXI/+ buttons on the speaker to adjust volume. • Press the NA/= and NA/+ buttons on the speaker to skip tracks. • The remote control can also be used to adjust volume and playback. See the

Remote Control scription for instructions.

In some modes, volume & playback can only be adjusted with the controls on