# (Fold Inward) - - - - **▶**

(Back Cover)

(Front Cover)

Using the FM Radio Switch to FM mode.

If it is your first time using the FM radio, it's recommended to do a full scanning and saving of nearby available stations. Press + hold the [  $\blacktriangleright$ II ] button to start. The radio will make a complete scan, and return to the first saved station when

Radio functions can be controlled with the buttons on the speaker.

- Press + hold the [▶II] button to start or stop scanning.
   Press the [I◄VOL-] and [▶IVOL+] buttons to flip through saved stations.

USB Device and TF Card Input Insert a USB device, such as a USB flash drive, or micro SD/TF card into the USB or TF card input ports on the speaker.

Note: To listen to music on your USB device, you may need to have files stored in the root folder of the device. Check your USB device's manufacturer information

If the speaker does not automatically switch to the correct mode, press the  $\mbox{\bf [M]}$ button until you enter USB or TF card mode. The speaker will automatically begin playing music off the device.

In USB and TF mode, playback and volume adjustment will be controlled with buttons on the speaker.

- Press the [ ►II ] button to pause and resume playback.
- Press the [I◄ VOL-] and [►►I VOL+] buttons to skip tracks.

## Compliance Information

## FCC Information This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the

equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radiation Exposure Information
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable

WARNING Li-Ion Battery Inside

This product is fitted with a Li-Ion battery, Do not damage, open, or dismantle the battery

and the product is fitted with a Li-Ion battery. Do not damage, open, or dismantle the battery

with compatible WARNING Li-ion Battery Inside
This product is fitted with a Li-ion battery, Do not damage, open, or dismantle the battery and do not use it in damp and/or corrosive conditions. Use only with compatible chargers. Never dispose of batteries in a fire, and never expose them to high temperatures. Do not expose the product to temperatures exceeding 60°C (140°F).



Location of Controls

(BC) This symbol signifies and declares that this equipment has battery charging which complies with California CEC and energy efficiency.



Bluetooth This symbol signifies that this is a wireless device powered by Bluetooth® technology. This symbol represents FCC Declaration of Conformity and compliance.

## Warranty Information

- To obtain warranty service:

   Visit our customer support portal: www.customersupport123.com
   Select the brand and model of your device

 
   Select "Service Request" and if all out the form to begin your inquiry
   Select "Service Request" and if all out the form to an authorized retailer
   Exchanges require dated proof of purchase from an authorized retailer

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a plaim with

authorized service center for repair must be suitably packaged.

NO WARRANTES, WHETHER EXPRESS OR IMPLIED, INCLIDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES AND MERCHANTABILITY OR HITMSES FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY, DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTES AFTER THE EXPRESS WARRANTY PREPIOD STATEL ABOVE, NO OTHER EXPRESS WARRANTY OR REALANTY GIVEN BY ANY PERSON, IFRIM OR ENTITY WITH RESPECTOR PRODUCT SHALL BE BINDING ON DISTRIBUTOR, REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE. AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT LUL DISTRIBUTOR OR ITS MANUFACTURERS BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSCOLENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SANDS, DATA OR RECORDS) CAUSED BYTHE USE, MISUSE OR INABILITY TO USE THE PRODUCT. EXCEPT AS STATED HEREIN, NO THER WARRANTIES SHALL APPLY, NOTWITHTSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY TRANSFERABLE.

# **Polaroid**



Visit us at customersupport123.com



©2020. All rights reserved

# **Polaroid**



## PBT9525

XL Wireless Party Speaker **User Manual** 

# Before You Begin...

To ensure safe and proper use, read all safety information before using the device. Only use with manufacturer-approved batteries, chargers, accessories, and supplies. • THIS DEVICE IS NOT A TOY, do NOT allow children or pets to use or play with

- Do not disassemble, modify, or repair the device.
- Do not expose to extreme temperatures (heat or cold), open flames, humid, or wet conditions.
- Low power may cause poor Bluetooth connection or sound distortion. Do not overcharge battery.
- If using with a USB adapter, make sure the adapter is not damaged.
   Do not allow the USB port or the connectors of the supplied USB cable to be exposed to dust or water, or to come into contact with any conductive materials such as liquids, metallic powders, etc.
- The speaker contains a built-in battery and should not be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of this device


### In the Box

- PBT9525 Wireless Speaker (x1)
   MIcro-USB Charging Cable (x1)
- User Manual (x1)

# [|**44** VOL-]|[**▶>**| VOL+] ress + hold: Adjust volum ₹-- [▶**||**] Button: **ĕ** ₹ [ M ] Button: > 图 - [ - 🖫 - ] Button:

Back of

g Speaker

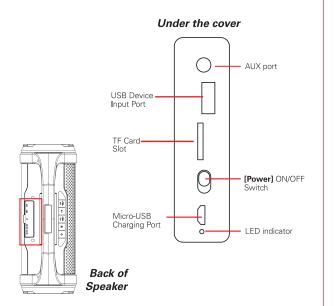

# Getting Started

## Charging the Speaker

Plug the small connector of the included charging cable into the charging port underneath the cover on the back of the speaker. Plug the large connector into the USB port on a computer, or into a **5V USB adapter** (not included) and plug into a

The LED indicator will turn RED while charging and turn OFF when fully charged. When the speaker is low on power, a tone will be heard indicating that it needs to

# Powering ON/OFF

- Move the [Power] switch to power ON and OFF.
- When powered ON, the speaker will enter Bluetooth pairing mode, and will automatically re-pair to any available previously-paired device nearby.

### Adjusting Volume

In all modes, overall volume can be adjusted with the buttons on the speaker. In AUX and Bluetooth modes, volume can also be controlled by your connected

- Press + hold the [►►IVOL+] button to increase volume.
- Press + hold the [I◄ VOL-] button to decrease volume.

# Using the Lights

The lights will automatically turn ON when the speaker is powered ON.

- Press the [ - ] button to switch between the speaker's built-in LED light modes.
- Some light modes are sound-reactive and will dance to the beat of your music. For best results, turn up the volume.

# Changing Input Modes

Press the [ M ] button on the speaker to switch input modes.

ATF card or USB device must be inserted or connected to switch to these modes.

- Power the speaker ON. A tone will be heard and the speaker will enter Bluetooth pairing mode. The LED indicator will **quickly flash BLUE.**
- 2. Set your mobile device to search for Bluetooth devices. When the list appears, select PBT9525 from the found devices.
- 3. After a successful pairing, a tone will be heard and the LED indicator will **slowly**
- In Bluetooth mode, playback and volume can be adjusted with your paired device or the controls on the speaker listed below.
  • Press the [▶II] to pause playback. Press again to resume.
- Press the [▶NVOL+] button to skip to the next track.
   Press the [I◀VOL-] button to skip to the previous track.

Insert one end of a 3.5 mm auxiliary cable (not included) into the AUX input port on the speaker. Insert the other end into the headphone jack or 3.5 mm aux output port on your media-playing device.

Switch input modes until you reach AUX mode.

In AUX mode, all playback will be controlled by your connected device.