$(Fold Inward) - - - - \rightarrow$

(Back Cover)

(Front Cover)

USB Device and TF Card Input

Insert a USB device, such as a USB flash drive, or micro SD/TF card into the USB or TF card input ports on the back of the speaker.

Note: To listen to music on your USB device, you may need to have files stored in the root folder of the device. Check your USB device's manufacturer information

[MODE] button until you enter USB or TF card mode. A voice will be heard indicating the mode, and the speaker will automatically begin playing music off the

In USB and TF mode, playback and volume adjustment will be controlled with controls on the back of the speaker.

Using the Microphone

Plug the 1/4" connector of the included microphone into the MIC input port on the

- back of the speaker. Switch the mic ON.

 Adjust mic echo using the [ECHO] dial on the back of the speaker.
- Adjust mic volume using the [MIC] dial on the back of the speaker.

Note: In order to avoid loud feedback, keep the microphone behind the speaker and pointed away from the speaker, and switch the microphone off when not in

Compliance Information

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the

equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference or radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged rot y to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radiation Exposure Information The device has been evaluated to meet general RF exposure requirement. The device can be used in portable

WARNING Life Battery Inside
This product is fitted with a Li-lon battery, Do not damage, open, or dismantle the battery and do not use it in damp and/or corrosive conditions. Use only with compatible chargers. Never dispose of batteries in a fire, and never expose them to high temperatures. Do not expose the product to temperatures exceeding 60°C (140°F).

 
Rating Label

— Direct current symbol.



This symbol signifies the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment.

(BC) This symbol signifies and declares that this equipment has battery charging which complies with California CEC and energy efficiency.



This symbol represents FCC Declaration of Conformity and compliance.

Warranty Information

- To obtain warranty service:

 Visit our customer support portal: www.customersupport123.com

 Salect the band and model of your device

 Salect Service Repeared "and if a orthor to begin your inquiry

 Salect Service Repeared "and if a orthor to begin your inquiry

 Salect Service Repeared "and if a orthor to begin your inquiry

 Salect Service Repeared "and if a orthor to begin your inquiry

 Salect Service Repeared "and if a orthor to begin your inquiry

 Salect Service Repeared "and in a orthor to begin your inquiry"

 Salect Service Repeared "and in a orthor to begin your inquiry"

 Salect Service Repeared "and in a orthor to begin your inquiry"

 Salect Service Repeared "and in a orthor to begin your inquiry"

 Salect Service Repeared "and in a orthor to begin your inquiry"

 Salect Service Repeared "and in a orthor to begin your inquiry"

 Salect Service Repeared "and in a orthor to begin your inquiry"

 Salect Service Repeared "and in a orthor to begin your inquiry"

 Salect Service Repeared "and in a orthor to begin your inquiry"

 
 Salect Service Repeared "and in a orthor to begin your inquiry"

 Salect Service Repeared "and in a orthor to begin your inquiry"

 Salect Service Repeared "and in a orthor to begin your inquiry"

 Salect Service Repeared "and in a orthor to be a ort

Polaroid



Visit us at customersupport123.com



Polaroid



PBT9580

Wireless Karaoke Speaker with Mic

User Manual

Before You Begin...

READ CAREFULLY AND KEEP THIS MANUAL

Customer Support

problems with your product, please visit our website at SouthernTelecom.com and click on Product Support.

To ensure safe and proper use, read all safety information before using the device. Only

- use with manufacturer-approved batteries, chargers, accessories, and supplies.

 THIS DEVICE IS NOT A TOY, keep away from children and pets.

 Do not disassemble, modify, or repair the device.

 Do not expose to extreme temperatures (heat or cold), open flames, humid, or wet

- Do not submerge in water.
- Low power may cause poor Bluetooth connection or sound distortion.
- Do not overcharge battery.

 If using with a USB adapter, make sure the adapter is not damaged.

 Do not allow the USB port or the connectors of the supplied USB cable to be exposed. to dust or water, or to come into contact with any conductive materials such as liquids,
- household waste. Please consult the local authorities on the correct way to dispose of

In the Box

- PBT9580 Wireless Speaker (x1)
 Wired Microphone (x1)
- Micro-USB Charging Cable (x1)
 User Manual (x1)

Location of Controls VOLUME] Dia harging Port [MODE] Button: [[][[]] O. ►II [>II] Button: Press. rause/nesurne, Press + Hold: Scan Radio [-♥-] Button: TF Card Slot -

Getting Started

Charging the Speaker

Plug the small connector of the included charging cable into the charging port on the back of the speaker. Plug the large connector into the USB port on a computer, or into a 5V USB adapter (not included) and plug into a wall outlet.

The LED indicator will **turn RED** while charging and turn OFF when fully charged. When the speaker is low on power, a tone will be heard indicating that it needs to be recharged.

Powering ON/OFF

- Turn the [POWER/VOLUME] dial clockwise until it
- clicks to power the speaker ON.

 When powered ON, the speaker will enter Bluetooth pairing mode, and may automatically re-pair to any available previously-paired device nearby.
- Turn the **[POWER/VOLUME]** dial **counter-clockwise** until it clicks to power the speaker OFF.

Changing Input Modes

Press the [MODE] button on the back panel of the speaker to switch between input modes. The LED screen on the back of the speaker will indicate the mode. and a voice will be heard indicating the mode.

You must have a micro TF card or USB device inserted or AUX cable connected to switch to these modes.

Adjusting Volume & Playback

- Adjust volume with the **[POWER/VOLUME]** dial or the controls on a connected • Press the [◄] and [▶] buttons on the speaker to skip tracks or stations in
- Bluetooth mode, FM Radio mode, USB mode and TF card mode.
- Press the [▶II] button to pause and resume playback.

Bluetooth Pairing

- Power the speaker ON. A tone will be heard and the LED screen will display the word "BLUE."
- Set your mobile device to search for Bluetooth devices. When it appears, select PBT9580 from the found devices.
- 3. After a successful pairing, a tone will be heard and you will be able to play music on the speaker.

In Bluetooth mode, volume & playback can be adjusted using the controls on your paired device, or the controls on the speaker listed in the Adjusting Volume & Playback section above.

Using the Speaker Lights

The LED lights will automatically turn on when the speaker is powered on. and turn the lights off.

Using the FM Radio

Power the speaker ON and switch to FM mode. A voice will be heard, and the LED screen will display the current FM frequency.

If it is your first time using the FM radio, it's recommended to do a full scan of nearby stations. Press and hold the [\blacktriangleright III] button to start scanning and saving

Radio functions can be controlled with the buttons on the speaker.

• Press and hold the [▶II] button to start or stop scanning.

• Press the [I◄] and [▶] buttons to flip through saved stations.

Using the AUX Input

Insert one end of a 3.5 mm auxiliary cable (not included) into the AUX input port on the back of the speaker. Insert the other end into the headphone jack or 3.5 mm aux output port on your media-playing device.

The speaker should automatically switch to AUX mode when a cable is plugged into the AUX port. If it doesn't, switch input modes until you reach AUX mode

In AUX mode, all playback will be controlled by your connected device.

Instructions continued on the next page.