


# Polaroid

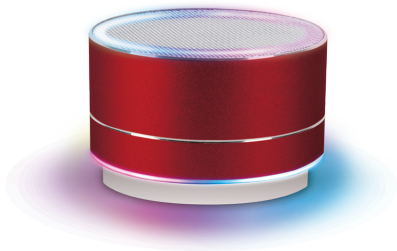

**PBT9627**

METALLIC PULSE

LED Wireless Speaker

**User Manual**

# Before You Begin...

## READ THIS MANUAL CAREFULLY AND SAVE FOR FUTURE REFERENCE

### Caution

To ensure safe and proper use, read all safety information before using the device. Only use with manufacturer-approved batteries, chargers, accessories, and supplies.

- **THIS DEVICE IS NOT A TOY**, do NOT allow children or pets to use or play with this device.
- Do not disassemble, modify, or repair the device.
- Do not expose to extreme temperatures (heat or cold), open flames, humid, or wet conditions.
- **Do not submerge in water.**
- Low power may cause poor Bluetooth connection or sound distortion.
- Do not overcharge battery.
- If using with a USB adapter, make sure the adapter is not damaged.
- Do not allow the USB port or the connectors of the supplied USB cable to be exposed to dust or water, or to come into contact with any conductive materials such as liquids, metallic powders, etc.
- Store only safe, dry location, away from sources of water, light, heat, and dust. The device is best stored in an airtight box or bag (not included).
- Clean by wiping with a clean dry microfiber cloth ONLY. Do not clean with water or any sort of cleaning liquid or detergent.
- The earbuds and case contain built-in batteries and should not be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of this device.


### Customer Support

For any questions or problems with your product, please visit our website at **customersupport123.com**.

### In the Box

- PBT9627 - Wireless Speaker (x1)
- 2-in-1 Charging and Aux Cable (x1)
- Instruction Manual (x1)

# Location of Controls

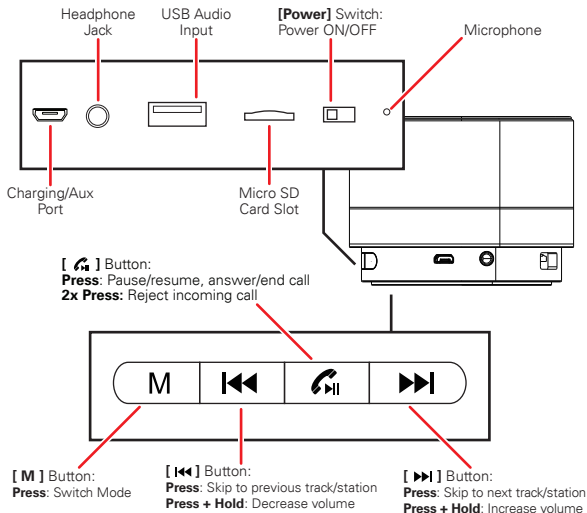

# Getting Started

## Charging the Speaker

Plug the micro-USB connector of the included 2-in-1 cable into the charging/AUX port on the speaker. Plug the USB connector into a USB power source, such as the USB port on a computer or a 5V USB wall adapter (*not included*).

The LED indicator will **turn RED** while charging and turn off when fully charged. On low power, a tone will be periodically heard, indicating that the speaker should be charged.

## Using the Speaker

***Make sure that the speaker has been charged.***

- Move the **[Power]** switch to the ON position. A tone will be heard and the speaker will enter Bluetooth pairing mode. The speaker will automatically re-pair to any nearby, previously-paired device.
- Move the **[Power]** switch to the OFF position to power OFF.

## Changing Modes

Press the **[ M ]** button to switch between input modes. A voice will be heard indicating the current mode.

**Note:** You must have the 2-in-1 cable or a USB device connected to switch to AUX or USB mode, or have a micro SD card inserted to switch to Micro SD Card mode.

## Adjusting Volume and Playback

- Press and hold the [ ⏮ ] and [ ⏭ ] buttons on the speaker to adjust volume, or use the controls on a connected device.
- Press the [ ⏮ ] and [ ⏭ ] buttons on the speaker to skip tracks or stations in Bluetooth mode, FM Radio mode, USB mode and Micro SD Card mode. Use the controls on your device to skip tracks in AUX mode.
- Press the [ ⏸ ] button to pause and resume playback.

## Connecting with Bluetooth

1. Power the speaker ON. A voice will be heard and the speaker's light ring will flash.
2. Set your mobile device to search for Bluetooth devices. When it appears, select **PBT9627** from the list of found devices.
3. After a successful pairing, a tone will be heard and the speaker's light ring will continue to flash.

In Bluetooth mode, playback and volume adjustment can be controlled with the buttons on the speaker or with the controls on your paired device.

## Answering/Ending Phone Calls

- Press the [ 📞 ] button to answer an incoming phone call.
- Press the [ 📞 ] button to end a phone call.
- 2x press the [ 📞 ] button to redial the last outgoing number.

## Using with a Wired Device

1. Plug the micro-USB connector of the included 2-in-1 cable into the charging/AUX port on the speaker.
2. Plug the 3.5 mm (round) connector into the headphone jack or other 3.5 mm audio output port on your media-playing device.
3. Switch to AUX mode.

In AUX mode, all playback will be controlled by your connected device.

## Using the FM Radio

Switch to FM Radio mode.

- Plug in the micro USB connector of the provided 2-in-1 cable to use it as an antenna.
- Press the [ ⏮ ] and [ ⏭ ] buttons to skip stations.

**Note:** The FM radio will have best reception where there is a clear line of sight to the sky.

## Using a Micro SD Card

While the speaker is powered off, insert a micro SD card into the micro SD card slot.

Press the [ M ] button until you hear a voice indicating TF Card or SD Card mode.

- Skip tracks using the [ ⏮ ] and [ ⏭ ] buttons on the speaker.
- Pause and resume playback with the [ ⏸ ] button.

**Note:** Micro SD cards can only be inserted in one direction. If the card does not easily slide and “clip” into place, remove, turn it around, and re-insert into the slot.

**Instructions continued on the next page.**

## Using the USB Audio Input

Plug your USB flash drive into the USB audio input port on the speaker. If the speaker does not automatically switch to USB Input Mode, press the [ **M** ] button until a voice indicates USB mode.

- Skip tracks using the [ **⏮** ] and [ **⏭** ] buttons on the speaker.
- Pause and resume playback with the [ **⏸** ] button.

## Using the Headphone Jack

To listen using headphones in any mode, plug the 3.5 mm auxiliary connector of your headphones (*not included*) into the headphone jack on the speaker.

# Polaroid



# Compliance Information

## FCC Information

This device complies with Part 15 of the FCC Rules.

**Caution:** Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## Radiation Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

## WARNING Li-ion Battery Inside

This product is fitted with a Li-ion battery. Do not damage, open, or dismantle the battery and do not use it in damp and/or corrosive conditions. Use only with compatible chargers. Never dispose of batteries in a fire, and never expose them to high temperatures. Do not expose the product to temperatures exceeding 60°C (140°F).



## Rating Label Definitions



Direct current symbol.



This symbol signifies the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment.



This symbol signifies and declares that this equipment has battery charging which complies with California CEC and energy efficiency.



Bluetooth

This symbol signifies that this is a wireless device powered by Bluetooth® technology.



This symbol represents FCC Declaration of Conformity and compliance.



# Warranty Information

## 90-Day Limited Warranty

Territory: United States/Canada

### LIMITED WARRANTY TO ORIGINAL CONSUMER

This product as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:

#### To obtain warranty service:

- Visit our customer support portal: [www.customersupport123.com](http://www.customersupport123.com)
- Select the brand and model of your device
- Select "Service Request" and fill out the form to begin your inquiry
- Exchanges require dated proof of purchase from an authorized retailer

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

#### Warranty service not provided

This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR OR ITS MANUFACTURERS BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

Printed in China  
v1. 08-2021

# Polaroid



**Have questions? We've got answers.**

Visit us at [customersupport123.com](https://customersupport123.com)



Instantly recognizable. Instantly reassuring. The Polaroid Classic Border and Polaroid Color Spectrum logos let you know you've purchased a product that exemplifies the best qualities of our brand and that contribute to our rich heritage of quality and innovation.

©2021. All rights reserved.

Polaroid, Polaroid Color Spectrum and Polaroid Classic Border Logo are trademarks of PLR IP Holdings, LLC, used under license. PLR IP Holdings LLC, does not manufacture this product or provide any manufacturer's warranty or support.