## (Fold Inward) — — — **▶**

(Back Cover)

**Polaroid** 

(Front Cover)

## Compliance Information

FCC Information
This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the

- of the following measures:

   Reorient or relocate the receiving antenna.

   Increase the separation between the equipment and receiver.

   Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

   Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (I This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undestired operation.

WARNING Li-ion Battery Inside

This product is fitted with a Li-ion battery. Do not damage, open, or dismantle the battery and do not use it in



(BC) This symbol signifies and declares that this equipment has battery charging which compliment with California CEC and energy efficiency.



### Warranty Information

90-day Limited Warranty Territory: United States/Canada

LIMITED WARRANTY TO ORIGINAL CONSUMER This product (including any accessories included in the original packaging) as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:

- Visit our website at www.southerntelecom.com
  Click on Product Support
  Select the Brand of your device
  Select the Brand of your device
  Select Service Request and fill out the form to begin your inquiry

you to file a claim with the carrier.

#### Warranty service not provided

This warrant yearvee not provided his warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of easonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is violed in the event any unauthorized person opens, alters or repairs this product. All products being eturned to the authorized service center for repair must be suitably packaged.

Tetured to the authorized service center for repair must be suitably packaged.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO THEIR EXPRESS WARRANTY OR GUARRANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - A TDISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR OR ITS MANUPACTURERS BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT EXCEPT AS STATED HERBIN, NO OTHER WARRANTIES SHALL APPLY. NOTWITHISTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PROPRIET SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXCRED THE PURCHASE PRICE OF THE PROPRIET SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXCRED THE PURCHASE PRICE OF THE PROPRIET SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXCRED THE PURCHASE PRICE OF THE PROPRIET SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXCRED THE PURCHASE PRICE OF THE PROPRIET SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXCRED THE PURCHASE PRICE OF THE PROPRIET SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXCRED THE PURCHASE PRICE OF THE PROPRIET SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXCRED THE PURCHASE PRICE OF THE PROPRIET SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXCRED THE PURCHASE PRICE OF THE PROPRIET SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXCRED THE PURCHASE PRICE OF THE PROPRIET.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific le rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

PLR IP Holdings, LLC, its licensees and affiliates, fully support all electronic waste initiatives. As responsible stewards of the environment, and to avoid violating established laws, you should properly dispose of this product in compliance with all applicable regulations, directives or other governances in the area where you reside. Please check with local authorities or the retailer where you pruchased this product to determine a location where you can appropriately dispose of the product

Polaroid, Polaroid & Pixel, Polaroid Color Spectrum, and Polaroid Classic Border Logo are trademarks of PLR, IP Holdings, LLC, used under license.





Printed in China

# **Polaroid** Instruction Manual CAMO Wireless Headphones PBTH207

#### Before You Begin...

#### Customer Support

For any questions or problems with your product, please visit our website at SouthernTelecom.com and click on Product Support.



To ensure safe and proper use, read all safety information before using the device. Only use with manufacturer-approved batteries, chargers, accessories, and supplies.

• THIS DEVICE IS NOT A TOY, do NOT allow children or pets to use or play with

#### Do not disassemble, modify, or repair the device.

- Do not expose the unit to extreme temperatures (heat or cold), open flames,
- humid, or wet conditions. • Do not submerge in water.
- Low power may cause poor Bluetooth connection or sound distortion.
- Do not overcharge battery.
- If using with a USB adapter, make sure the adapter is not damaged. Do not allow the USB port or the connectors of the supplied USB cable to be exposed to dust, or water, or come into contact with any conductive materials
- such as liquids, metallic powders, etc.

  The headphones contain a built-in battery and should not be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of this device.

#### In the Box


- PBTH207 Wireless Headphones (x1)
   USB Charging Cable (x1)
- Instruction Manual (x1)

## (Side of right [ \_ ] Button: Charging Port Microphone Indicator

(Bottom of right earcup)

#### Location of Controls

Charging the Headphones Plug the small connector of the included power cable into the charging port on the headphones' right earcup. Plug the large connector into the USB port on a computer or a compatible 5V USB adapter (not included) and plug into a wall socket.

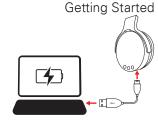

The headphones' LED indicator will turn solid RED while charging and turn OFF when fully charged. On low battery, a voice will be heard, indicating that the headphones need to be charged.

#### Powering ON/OFF

• Press and hold the [ ▶] button for ~3-5 seconds to power the eadphones

 
• When powered on, a voice will be heard and the head-phones will enter Bluetooth pairing mode. They will automatically re-pair to any nearby, previously-paired device with Bluetooth enabled.

## Playing Music

To listen to music on the headphones, you must be paired to a Bluetooth-enabled device. Consult the Bluetooth Pairing section of this manual for further instruction.

## Bluetooth Pairing

- 1. Power the headphones ON. A voice will be heard, and the LED indicator will quickly flash BLUE.
- 2. Set your mobile device to search for Bluetooth devices.
- Select PBTH207 from the list of found devices.
- 3. After a successful pairing, a voice will be heard and the LED indicator will slowly flash BLUE.
- In Bluetooth mode, playback and volume can be adjusted with the on-ear controls, or with your paired device.
- Press the [▶] button to pause and resume playback. The headphones' LED indicator will flash BLUE once you begin playing audio after pairing.
- Press the [+] and [-] buttons to skip tracks.
- Press and hold the [+] and [-] buttons to adjust volume.



#### Phone Calls

- To use the phone functions on the headphones, you must be connected to a Bluetooth-enabled device.
- Press the [▶] button to answer and end phone calls. Playback will automatically pause and resume.
- 2x press the [▶] button to dial the last outgoing phone number.
- Press and hold the [▶] button to reject an incoming call and send straight to voicemail