$(Fold Inward) - - - - \rightarrow$

(Back Cover)

(Front Cover)

Compliance Information

FCC Information
This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment penerates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to ry to correct the interference by one or more of the following measures:

• Reorient or relocate the receiving antenna.

• Increase the separation between the equipment and receiver.

• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

• Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radiation Exposure Information
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

This symbol signifies the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment.

BC This symbol signifies and declares that this equipment has battery charging which complies with California CEC and energy efficiency.



Bluetooth This symbol signifies that this is a wireless device powered by Bluetooth® technology. This symbol represents FCC Declaration of Conformity and compliance.

Warranty Information

90-day Limited Warranty

LIMITED WARRANTY TO ORIGINAL CONSUMER
This product fincluding any accessories included in the original packaging) as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:

- To obtain warranty service:

 Visit our website at www.southerntelecom.com

 Click on Product Support

 Select the Brand of your device

 Select Service Request and fill out the form to begin your inquiry

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require

 
Warranty service not provided

Warranty service not provided This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, CITHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY OR DEPEND STATED ABOVE. NO TOTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY MAY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE AT DISTRIBUTOR'S SOLE DISCRETION. ARE THE EXCLUSIVE REMOEDES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR SOLE DISCRETION. ARE THE EXCLUSIVE REMOEDES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR OR ITS MANUFACTURERS BE LIABLE FOR ANY INCIDENTAL, DIRECT, BROOKED STATE OF THE PRODUCT. EXCEPT AS TATED HERBIN, NO OTHER WARRANTIES SHALL APPLY, NOTUMITHSTANDING THE FOREOUT. EXCEPT AS STATED HERBIN, NO OTHER WARRANTIES SHALL APPLY, NOTUMITHSTANDING THE FOREOGONG, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THAT WARRANTY SHALL NOT EXCEPT THE PURCHASE PRICE OF THE PRODUCT SOLD BY OSTITIBUTOR. THAT WARRANTY SHALL NOT EXCEPT THE DIRECT HAN THE ORIGINAL CONSUMER'S NECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THAT WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

Polaroid



Visit us at customersupport123.com



Designed in US Printed in China

©2021, All rights reserved

Polaroid



Noise-Cancelling Wireless Headphones **User Manual**

Before You Begin...

READ CAREFULLY AND KEEPTHIS MANUAL

Caution
To ensure safe and proper use, read all safety information before using the device. Only

- use with manufacturer-approved batteries, chargers, accessories, and supplies.

 THIS DEVICE IS NOT A TOY, keep away from children and pets.
- Do not disassemble, modify, or repair the device.
 Do not expose to extreme temperatures (heat or cold), open flames, humid, or wet

- conditions.

 Do not submerge in water.

 Low power may cause poor Bluetooth connection or sound distortion.

 Do not overcharge battery.

 If using with a USB adapter, make sure the adapter is not damaged.

 Do not allow the USB port or the connectors of the supplied USB cable to be exposed to dust or water, or to come into contact with any conductive materials such as liquids, materials powders at the connectors.
- The headphones contain a built-in battery and should not be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of

- Safety Warnings
 Do NOT use the headphones with the ANC (noise cancelling) on, or listen on high volume, at any time that the inability to hear surrounding sounds may present a danger to yourself or others, such as while riding a bicycle or walking near traffic, a construction site, railroad crossing, etc.
 Do NOT use the headphones at a high volume for any extended period.
 Do NOT use your headphones while driving for phone calls or any other purpose.

- PSNC801 Wireless Headphones (x1)
- USB Charging Cable (x1) • 3.5 mm Auxiliary Cable (x1)

Location of Controls 1. LED Indicator 2. Microphone 3. 3.5 mm AUX Port 4. Micro-USB Charging Port5. [ANC Power] Button: Cancelling ON/OFF 6. [-◄◄] Button: Press: Skip to previous track Press + hold: Decrease volume 7. [►II] Button: Press: Pause and resume playback, Answer and end phone call Press + hold (3s): Power ON/OFF 8. [▶▶+] Button: Press: Skip to next track Press + hold: Increase volume -**----** | ▶II | ▶▶+ | ANC

Getting Started

Charging the Headphones

Plug the small connector of the included charging cable into the charging port on the bottom of the headphones' earcup. Plug the large connector into the USB port on a computer or a compatible **5V USB adapter** (not included) and plug into a wall

The LED indicator on the headphones will turn RED while charging and turn OFF when finished charging.

Powering ON/OFF

- Press and hold the [►II] button for **3 seconds** to power the headphones ON and
- When powered on, the headphones may automatically reconnect to a nearby previously-paired device with Bluetooth enabled.

Using the Active Noise Control

Warning: Read all Safety Warnings in this manual before using the Active Noise Cancelling feature. The headphones' Active Noise Control (noise cancelling) feature reduces

unwanted noise from the outside environment. You can use ANC while listening to audio, or use ANC by itself.

- Press the [ANC Power] button to turn on Active Noise Control (noise
- Press the [ANC Power] button again to turn ANC OFF.

Playing Music

To listen to music on the headphones, you must be paired to a Bluetooth-enabled device or connected via the 3.5 mm AUX port. Consult the **Bluetooth Pairing** or **Connecting with a 3.5 mm AUX Cable** sections of this manual for further

Bluetooth Pairing

- ones ON. A voice will be heard, and the LED indicator will flash BLUE and RED
- 2. Set your mobile device to search for Bluetooth devices. Select **PSNC801** from the list of found devices.
- 3. After a successful pairing, a voice will be heard and the LED indicator will turn solid BLUE, and then the LED indicator will flash BLUE while playing music.
- In Bluetooth mode, playback and volume can be adjusted with the on-ear controls, or with your paired device.

 • Press the [►II] button to pause and resume playback.
- Press the [-◄] and [▶▶+] buttons to skip tracks.
 Press and hold the [-◄] and [▶▶+] buttons to adjust volume.

Phone Calls

To use the phone functions on the headphones, you must be connected to a Press the [►II] button to answer and end phone calls. Playback will automatically

- 2x press the [>II] button to dial the last outgoing phone number. Press and hold the [►II] button to reject an incoming call and send straight to voicemail.

Connecting with a 3.5 mm AUX Cable Plug one connector of the included 3.5 mm auxiliary cable into the 3.5 mm aux

input port on the bottom of the left earcup. Plug the other connector into the audio output port on your media-playing device.

- In auxiliary mode, all playback and volume will be adjusted with the controls on your connected device.
- The headphones will automatically power OFF when a 3.5 mm AUX cable is inserted.

