(Fold Inward) - - - - **▶**

(Back Cover)

(Front Cover)

Compliance Information

FCC Information This device complies with Part 15 of the FCC Rules.

FCC ID: 2AG5CLSSOUND

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pur suant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmfur interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more

- of the following measures:

 Reorient or relocate the receiving antenna.

 Increase the separation between the equipment and receiver.

 Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

 Consult the dealer or an experienced radio/TV technician for help.

Radiation Exposure Information
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable

WARNING Li-ion Battery Inside
This product is fitted with a Li-ion battery, Do not damage, open, or dismantle the battery and do not use it in damp and/or corrosave conditions. Use only with compatible chargers. Never dispose of batteries in a fire, and never expose them to high temperatures. Do not expose the product to temperatures exceeding 60°C (140°F).

Rating Label Definitions

--- Direct current symbol

This symbol signifies the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment.

BC This symbol signifies and declares that this equipment has battery charging which complies with California CEC and energy efficiency.

Bluetooth This symbol signifies that this is a wireless device powered by Bluetooth® technology.

Warranty Information

90-day Limited Warranty

LIMITED WARRANTY TO ORIGINAL CONSUMER

This product (including any accessories included in the original packaging) as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:

- To obtain warranty service:

 Visit our website at www.southerntelecom.com
 Click on Praduct Support
 Select the Brand of your device
 Select Service Request and till out the form to begin your inquiry

Location of Controls

2. Earbud LED Indicator

3. Case-Charging LED Indicator

6. Micro-USB Charging Port

4. Earbud-Charging LED Indicator

5. [O] Button: Enable/disable earbud charging

I. [Multi] Button:

Warranty service not provided This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FINNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY, DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY OF PERIOD STATED ABOVE. AND OTHER EXPRESS WARRANTY OR GUARANTY (SHEN BY SAMY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER, IN NO EVENT WILL DISTRIBUTOR SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF TO FIGURE OF THE CONSUMER, IN NO EVENT WILL DISTRIBUTOR OR ITS MANUFACTURERS BE LIBBLE FOR ANY INCIDENTAL, DIRECT, PROCINCE OR CONSCIOURNIL ADMANGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT EXCEPT AS STATED HERBIN, NO OTHER WARRANTIES SHALL APPLY. NOTWITHISTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PROPOLICY SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXCRED THE PURCHASE PRICE OF THE PROPOLICY SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXCRED THE PURCHASE PRICE OF THE PROPOLICY SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXCRED THE PURCHASE PRICE OF THE PROPOLICY SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXCRED THE PURCHASE PRICE OF THE PROPOLICY SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXCRED THE PURCHASE PRICE OF THE PROPOLICY SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXCRED THE PURCHASE PRICE OF THE PROPOLICY SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXCRED THE PURCHASE PRICE OF THE PROPOLICY SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXCRED THE PURCHASE PRICE OF THE PROPOLICY SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXCRED THE PURCHASE PRICE OF THE PROPOLICY SOLD BY DISTRIBUTOR. THE WARRANT SHALL NOT EXCRED THE PURCHASE PRICE OF THE PROPOLICY SOLD BY DISTRIBUTOR.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

PLR IP Holdings, LLC, its licensees and affiliates, fully support all electronic waste initiatives. As responsible stewards of the environment, and to avoid violating established laws, you should properly dispose of this product in compliance with all applicable regulations, directives or other governances in the area where you reside. Please check with local authorities or the retailer where you purchased this product to determine a location where you can appropriately dispose of the product.

Polaroid, Polaroid & Pixel, Polaroid Color Spectrum, and Polaroid Classic Border Logo are trademarks of PLB. IP Holdings.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. used under license.







Printed in China

Getting Started

╢╬╟



True Wireless Earbuds with Charging Case PTWS10



Before You Begin...

Customer Support

For any questions or problems with your product, please visit our website at **SouthernTelecom.com** and click on **Product Support.**



♠ Caution

READ THIS MANUAL CAREFULLY AND SAVE FOR FUTURE REFERENCE

To ensure safe and proper use, read all safety information before using the device. Only use with manufacturer-approved batteries, chargers, accessories, and supplies.

- THIS DEVICE IS NOT A TOY, do NOT allow children or pets to use or play with
- Do not disassemble, modify, or repair the device.
- Do not expose the device to extreme temperatures (heat or cold), open flames, umid, or wet conditions.
- · Do not submerge in water.
- Low power may cause poor Bluetooth connection or sound distortion.
- Do not overcharge battery. • If using with a USB adapter, make sure the adapter is not damaged
- Do not allow the USB port or the connectors of the supplied USB cable to be exposed to dust, or water, or come into contact with any conductive materials such as liquids, metallic powders, etc.

- PTWS10 True Wireless Earbuds (x1)
- Charging Case (x1)
- Micro-USB Charging Cable (x1) • User Manual (x1)

(Long Press) Power ON/OFF (Double Quick Press) Redial last phone number (Quick Press) Pause/resume playback, Answer/end phone call (Back of Charging Case)

Location of Controls

Charging the Case

Insert the small connector of the supplied micro-USB charging cable into the micro-USB charging port on the back of the charging case. Insert the large connector into the USB port on a computer, a USB charging device, or **5V USB adapter** (not included) and plug into a wall socket. The case-charging LED indicator will **flash RED** while charging and turn solid RED when fully charged.

Charging the Earbuds

Make sure that the charging case is fully charged. Open the charging case and insert the stem of each earbud into the case's charging port. Gently press down until they "clip" into place and

Press the [olimits'] button to enable charging. The earbud-charging LED indicator on the case will **turn BLUE**. The earbud LED indicators will ${\bf turn}~{\bf RED}$ while charging and ${\bf turn}~{\bf BLUE}$ when fully charged.

Powering ON/OFF

- Power the earbuds ON/OFF by long pressing both [Multi] buttons.
- The earbuds will automatically enter Bluetooth pairing mode.
- 1. Hold the earbuds close together. Long press the **[Multi]** button on both earbuds until their LED indicators flash RED and BLUE. After a moment, a voice will be heard on the earbuds indicating that they are connected. The LED indicators on the main earbud will **flash RED and BLUE** and
- the other earbud will **slowly flash BLUE**. Set your mobile device to search for Bluetooth devices. When it appears, select PTWS10 from the list of found devices.
- essfully paired, the LED indicators on each earbud will continue to slowly flash BLUE

Re-Pairing the Earbuds

e PTWS10 earbuds come automatically paired to each other right out of the box. If the earbuds come un-paired from each other, follow these instructions to re-pair.

- 1. Go to your device's Bluetooth settings and locate the earbuds on the list of Bluetooth devices. Tap to "Forget" the earbuds.

 2. Long press the [Multi] button of both earbuds at the same time, until the LED
- indicators flash RED and BLUE. 3. Double press the [Multi] button on the either earbud. After a moment, the LED
- indicator will flash RED and BLUE on one earbud and slowly flash BLUE on the other, then two earbuds will re-pair to each other.
- Once re-paired, you can now pair the earbuds to your mobile device. Please consult the Bluetooth Pairing section of this user manual.

Playing Music

To enjoy music wirelessly on your earbuds, make sure they are properly paired to your Bluetooth-enabled device. Once paired, playback is controlled through your paired device. If you are pairing the device for the first time, please consult the **Bluetooth Pairing** section in the previous column.

Pause/Resume Music

- Quick press the [Multi] button on either earbud to pause media playback.
 Quick press the [Multi] button on either earbud to resume media playback.

Answering/Ending Phone Calls

NOTE: Phone calls will only be heard on one earbud.

• Quick press the [Multi] button to answer an incoming phone call.

- Quick press the [Multi] button to end a phone call.
- Double quick press the [Multi] button to redial the last phone number called