## $(Fold Inward) - - - - \rightarrow$

## (Back Cover)

## (Front Cover)

### Compliance Information

FCC Information
This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the PCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation, if this equipment does cause harmful interference or radio communications. However, there is no guarantee that interference will not occur in a particular installation, if this equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

\*\*Peorient or relocate the receiving antenna.\*\*

\*\*Increase the separation between the equipment and receiver.\*

\*\*Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.\*

 
\*\*Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions; (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radiation Exposure Information
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable

WARNING Li-lon Battery Inside
This product is fitted with a Li-lon battery, Do not damage, open, or dismantle the battery and do not use it in damp and/or corrosive conditions. Use only with compatible chargers. Never dispose of batteries in a fire, and never expose them to high temperatures. Do not expose the product to temperatures exceeding 60°C (140°F).

This symbol signifies the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment.



This symbol represents FCC Declaration of Conformity and compliance.

### Warranty Information

 
Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to

Warranty service not provided
This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of
reasonable care, unauthorized modification including software modifications such as the installation of custom firmware.
This warranty is voided in the event any unauthorized person opens, afters or repairs this product. All products being
returned to the authorized service center for regard must be suitably packaged.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED NO WARRANTIES, WHETHER EXPRESS OR MPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OF FITNESS FOR A PARTICULAR PURPOSE. OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON. FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE AT DISTRIBUTOR'S SOLE DISCRETION. ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER, IN NO EVENT WILL DISTRIBUTOR OR ITS MANUFACTURERS BE LIABLE FOR ANY INCIDENTAL DIFFECT, INDIFFECT, SPECIAL, PUNITYE OR CONSCIOUENTAL DAMAGES SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS CAUSED BY THE USE. MISUSE OR INABILITY TO USE THE PRODUCT EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL APPLY. NOTWITHSTANDING THE FOREOUT SCALD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SCALD BY DISTRIBUTOR.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific leg rights, and you may have other rights that very from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

## **Polaroid**



Visit us at customersupport123.com



Printed in China

Getting Started



PTWSA21 True Wireless Earbuds **User Manual** 

**Polaroid** 

### Before You Begin...

### READ THIS MANUAL CAREFULLY AND SAVE FOR **FUTURE REFERENCE**

- To ensure safe and proper use, read all safety information before using the device. Only use with
- manufacturer-approved batteries, chargers, accessories, and supplies.

   THIS DEVICE IS NOT A TOY, do NOT allow children or pets to use or play with this device.

 
- THIS DEVICE IS NOT ATOY, do NOT allow children or pets to use or play with this device.
  On not disassemble, modify, or repair the device.
  Do not expose to extreme temperatures (heat or cold), open flames, humid, or wet conditions.
  Do not submerge in water.
  Low power may cause poor Bluetooth connection or sound distortion.
  Do not overcharge battery.
  If using with a USB adapter, make sure the adapter is not damaged.
  Do not allow the USB port or the connectors of the supplied USB cable to be exposed to dust or water, or to come into contact with any conductive materials such as liquids, metallic powders, etc.
  The earbuds and case contain built-in batteries and should not be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of this device.


### Customer Support

For any questions or problems with your product, please visit our website at customersupport123.com

### In the Box

- PTWSA21 True Wireless Earbuds (x1)
- Charging Case (x1)
- 8-Pin ("Lightning") Charging Cable (x1)
   User Manual (x1)



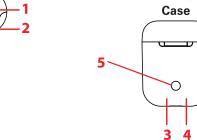

- 1. Earbud LED Indicator
- 2 [Multi] Button
- 3. Case-Charging LED Indicator
- 4. Earbud-Charging LED Indicator
- 5. [**ウ**] Button: Enable/
- disable earbud charging 6. Charging Port

# Bottom 7

### Location of Controls

Back of

### Charging the Case

Insert the small connector of the supplied charging cable into the charging port on the bottom of the charging case. Insert the large connector into the USB port on a computer or a 5V USB adapter (not included) and plug into a wall socket.

The case-charging LED indicator will **flash** *RED* while charging and **turn solid RED** when fully charged.

### Charging the Earbuds

Use the included charging case to protect and charge the earbuds as described below.

- Make sure that the case is fully charged.
   Open the charging case and insert the stem of each earbud
- into the case's charging port. Gently press down until they 'clip" into place and feel secure.
- a. Press the [ o ] button to enable charging. The earbud-charging LED indicator on the case will **turn BLUE**.
  4. The earbud LED indicators will **turn RED** while charging and **turn BLUE** when fully charged.

### Powering ON/OFF

- The earbuds will automatically power ON when removed from their case, and power OFF when placed into their case.
- When powered ON, the earbuds will automatically pair to each other and then enter Bluetooth pairing mode. They may automatically re-pair to a
- previously-paired device in range.
   The earbuds can also be powered ON and OFF by pressing and holding the [Multi] button for ~3-5 seconds.

### Bluetooth Pairing

- 2. After a moment, a voice will be heard on the earbuds indicating that they have
- paired to each other. The LED indicator on one earbud will flash RED and BLUE. 3. Set your mobile device to search for Bluetooth devices. When it appears, select
- PTWSA21 from the list of found devices. 4. Once successfully paired to your device, a voice will be heard, and you will be able to play audio on the earbuds.

### Playing Audio & Adjusting Playback To listen to audio wirelessly on your earbuds, make sure they are properly paired

to your Bluetooth-enabled device. If you are pairing the device for the first time, please consult the **Bluetooth Pairing** section above.

Once paired, playback can be controlled through your paired device, or with the

- controls on the earbuds below.

   1x press the [Multi] button on either earbud to pause and resume playback.
- Press + hold the [Multi] button on Right earbud to skip to the next track.
   Press + hold the [Multi] button on Left earbud to skip to the previous track.
- 2x press the [Multi] button on Right earbud to increase volume.
  2x press the [Multi] button on Left earbud to decrease volume.
- 3x press the [Multi] button on either earbud to activate your device's Voice

### Answering/Ending Phone Calls

- Press the [Multi] button on either earbud to answer an incoming phone call. • Press the [Multi] button on either earbud to end a phone call.
- Press + hold the [Multi] button on either earbud to reject an incoming call.
- 4x Press the [Multi] button on either earbud to redial the last outgoing phone

### Re-Pairing the Earbuds

The PTWSA21 earbuds should pair to each other automatically when powered ON. If the earbuds come un-paired from each other or only one earbud pairs to your device, try following these instructions to re-pair:

- 1. Go to your device's Bluetooth settings and find the earbuds on the list of Bluetooth devices. Tap to manually "Forget" the earbud(s), then turn your device's Bluetooth OFF.
- 2. Place the earbuds in their case to power them OFF, then remove them to power them ON again.
- After a moment, the earbuds should automatically re-pair to each other. A voice will be heard indicating that they have paired to each other.
- Once re-paired, you can now pair the earbuds to your mobile device. Turn your device's Bluetooth back on again. Follow the instructions in the Bluetooth Pairing section of this manual to try pairing again.