(Fold Inward) — — — **▶**

(Back Cover)

(Front Cover)

Activating Siri® or Voice Assistant

If you have Siri® or another voice assistant on your paired device, you can activate it using the controls on the earbuds or the controls on your device.

• 3x Touch either earbud's [Multi] button to activate voice assistant.

Storage & Maintenance

When not using the earbuds, it is recommended that they are stored away in the charging case and placed in a safe, dry location, away from sources of water, light, heat, and dust. They are best stored in an airtight box or bag (not included).

If the earbuds or case is dirty, wipe it down with a clean microfiber cloth. Do not

water or any sort of cleaning liquid or detergent.

Specifications TWS Earbuds

Bluetooth Ver.: 5.0

Bluetooth Range: 33 ft Talk & Play Time (3 Full Charges in Case): Up to 3 hrs Single Earbud Battery Capacity: 30 mAh

Input Type: USB-C

Case & Earbuds Charge Time: 1.5 hours

Charging Case Battery Capacity: 200 mAh

Compliance Information

FCC Information This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the

equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment penerates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment of and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or elocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consolit the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radiation Exposure Information
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable

symbol signifies that this is a wireless device powered by Bluetooth® technology.

mbol represents FCC Declaration of Conformity and compliance.

Warranty Information

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHA APPLY DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY OR GOLGALMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY OR THE PRODUCT SHALL BE BRIDDING ON DISTRIBUTOR REPAIR REPLACEMENT, OR REPLUN OF THE GORGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SCILE DISSORTION. ARE THE EXCLUSIVE MERCHES OF THE CONSUMER, IN NO EVENT WILL DISTRIBUTED ADMINISTRATION OF THE PRODUCT SHALL BE WARRANTIES OF ANY OF THE PRODUCT SHALL BE WITHOUT WARRANT OF THE PART OF THE PRODUCT SKEEP TA'S STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY, NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL DISTRIBUTOR SHALL DISTRIBUTOR SHALL DOT

Have questions? We've got answers.

Visit us at customersupport123.com

Polaroid





PTWSA33

True Wireless Earbuds **User Manual**

Before You Begin..

READ CAREFULLY AND KEEP THIS MANUAL

Customer Support For any questions or problems with your product, please visit our website at customersupport123.com

To ensure safe and proper use, read all safety information before using the device. Only use with manufacturer-approved batteries, chargers, accessories, and supplies.

• THIS DEVICE IS NOT A TOY, keep away from children and pets.

- Do not disassemble, modify, or repair the device.
 Do not expose to extreme temperatures (heat or cold), open flames, humid, or wet
- . Do not submerge in water. Do not submerge in water.
 Low power may cause poor Bluetooth connection or sound distortion.
 Do not overcharge battery.
 If using with a USB adapter, make sure the adapter is not damaged.
- Do not allow the USB port or the connectors of the supplied USB cable to be exposed to dust or water, or to come into contact with any conductive materials such as liquids,
- The speaker contains a built-in battery and should not be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of this device.

- In the Box
 PTWSA33 Wireless Speaker (x1)
- Micro-USB Charging Cable (x1)
 User Manual (x1)

Earbud [Multi] Button • Power On/Off Pause/Resume Playback Skip Tracks Adjust Volume Answer/End Phone Calls • Reject Phone Calls • Wake Voice Assistant __I FD Indicato Charging Case LCD Displa USB-C Charging Port

Location of Controls

Getting Started

Insert the small connector of the included USB-C charging cable into the charging port on the bottom of the charging case. Insert the larger connector into the USB port on a computer, or into a 5V/1A USB adapter (not included) and plug into an electrical outlet


case's charging progress while the case is charging, and when it is finished charging.

The LCD display screen will also indicate the case's current battery level. Please recharge the case when the battery is

Charging the Earbuds Use the included charging case to protect and charge your earbuds.

To charge the earbuds, open the case. Place the earbuds into the correct earbud charging ports. The earbuds will automatically power OFF and begin charging.

The LCD display screen will display the earbuds' charging progress, and turn OFF when the earbuds are fully charged.

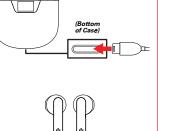

Powering On/Off

Charge the case and earbuds fully before using.


· Remove the earbuds from the case to automatically power them ON. The earbuds' LED

indicators will flash RED and BLUE. When both earbuds are powered ON at the same time they will automatically pair to each other after a few seconds, and a voice will be heard indicating that they are

- Insert the earbuds into the case to automatically power them OFF. The earbuds' LED indicators will quickly flash RED when they are powering OFF.
- The earbuds can also be powered ON and OFF by touching + holding the earbuds' [Multi] buttons for 2s. (power ON) or 5s. (power OFF).

Note: The earbuds will automatically power OFF if they are not paired to a Bluetooth device after 2 minutes, or if the paired device is out of Bluetooth range (10 m / 30 ft)

Note: Fither earbud can be used independently

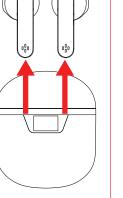


Bluetooth Pairing

1. Power the earbuds ON at the same time. The LED indicators on both earbuds will flash RED and BLUE. After a few seconds, a voice should be heard and one earbud's LED indicator will turn OFF while the other continues to flash, indicating that the earbuds have connected to each other If the earbuds don't connect to each other, see the troubleshooting section at the bottom of this page.

2. Open your device's Bluetooth menu and select PTWSA33 when it appears.

 3. Another voice will be heard, indicating that the earbuds are successfully connected to your device. The LED indicators on both earbuds will turn OFF.



Trouble Pairing the Earbuds to Each Other? Try these steps

- 1. Place both earbuds back into the case to power them OFF.
- 2. You may need to go into your device's Bluetooth settings and manually "Forget" one or both of the earbuds, and turn your device's Bluetooth OFF while the earbuds pair to
- 3. Turn your device's Bluetooth back ON if necessary, and follow the **Bluetooth Pairing** steps above again.

Controlling Playback

 
- 1x Touch the [Multi] button on either earbud to pause and resume audio playback. • Touch + hold (2s.) the [Multi] button on the left earbud to skip to the previous track.
- Touch + hold (2s.) the [Multi] button on the right earbud to skip to the next track.

• 2x Touch the [Multi] button on the right earbud to increase volume.

• 2x Touch the [Multi] button on the left earbud to decrease volume.

• 1x Touch the [Multi] button on either earbud to answer an incoming phone call. Touch again to end the phone call.

• Touch + hold (1s.) the [Multi] button on either earbud for 1 second to reject an incoming phone call.



1x Touch: Answer/end phone call Touch + hold (1s).: Reject incoming call