

Mahli User Guide

Fold Inward ->


(Outside)

(Back Cover)

(Front Cover)

Using the LED Lights

- Press the MODE button on the back of the clock to turn the LED lights ON.
- Press the MODE button again to turn the LED lights OFF.

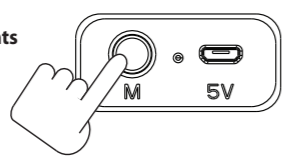

Cleaning & Storage

Clean the clock with a soft damp or dry cloth ONLY. Never submerge in water, or add water into the diffuser part.

When not in use, the clock should be stored in a cool, dry, dark place. It is best stored in an airtight box or bag (not included).

Compliance Information

FCC Information
This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.





Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radiation Exposure Information
This device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

Rating Label Definitions

-  Direct current symbol
-  This symbol represents FCC Declaration of Conformity and compliance.
-  This symbol signifies that the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment.
-  This symbol signifies and declares that this equipment complies with battery charging which complies with California CEC and energy efficiency.

Warranty Information

90-Day Limited Warranty
Territory: United States

LIMITED WARRANTY TO ORIGINAL CONSUMER
This product as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:

To obtain warranty service:

- Visit our customer support portal: www.customersupport123.com and select 'Support'.
- Select the brand, fill out the corresponding form (exchanges require dated proof of purchase from an authorized retailer) then submit your request.

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.


Warranty service not provided
This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTEE GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR OR ITS MANUFACTURERS BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

All product names, trademarks, and registered trademarks are property of their respective owners. All company product, and service names used in this document are for identification purposes only. Use of these names, trademarks, and brands does not imply endorsement.

Printed in China/Designed in the U.S.
v1. 03/2022



Instruction Guide

MDB-021

Before You Begin...

Caution
To ensure safe and proper use, read all safety information before using the device. Only use with manufacturer-approved batteries, chargers, accessories, and supplies.

- READ CAREFULLY AND KEEP THIS MANUAL.**
- THIS IS NOT A TOY.** Please keep away from children.
- Do not expose the unit to extreme temperatures (heat or cold), open flames, humid conditions, or wet conditions.
- Do not submerge in water.**
- Do not open this product or attempt to repair the unit yourself should it not be working.
- Do not allow the USB ports, power jack or other inputs of the device to be exposed to dust, or water, or come into contact with any conductive materials such as liquids, metallic powders, etc.
- This device contains a built-in battery and should not be disposed of with regular household waste. Always follow all laws and regulations in disposing of batteries.

Questions & Support
If you have any questions or problems concerning this product, please visit our website at customersupport123.com.


In the Box

- MDB-021 - Alarm Clock (x1)
- Himalayan Salt Rocks (x1)
- Essential Oil (x1)
- Micro-USB Power Cable (x1)
- User Manual (x1)


Getting Started

Location of Controls

Front of Clock

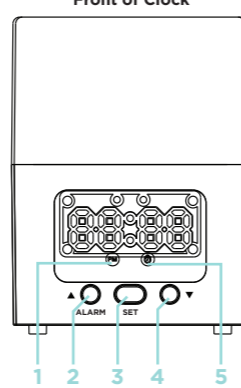

Back of Clock

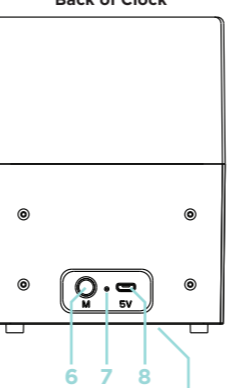


Air Intake Vent - Do NOT Block

- AM/PM Indicator
- ▲/ALARM Button:
Press: Increase selected digit
Press + hold: Turn alarm ON/OFF
- SET Button
- ▼ Button:
Press: Decrease selected digit
- Alarm ON/OFF Indicator
- MODE Button
- Power LED Indicator
- Micro-USB Power Port

Setting Up the Diffuser


- Place the included himalayan salt rocks into the bowl on the top of the alarm clock.
- Place a few drops of essential oil onto the salt rocks.

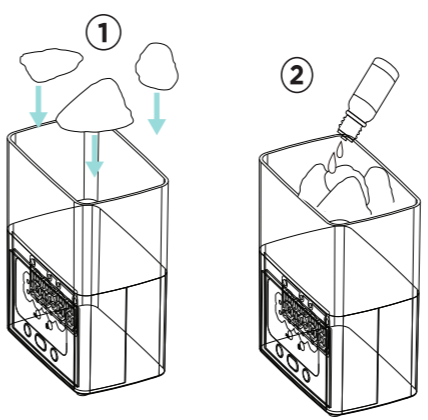

Connecting to Power

Insert the small connector of the included USB power cable into the power input port on the back of the clock. Insert the large connector into the USB port on a computer or into a compatible **5V/1A USB Power Adapter** (not included) and plug into a wall outlet.

The clock display will turn on when the clock is connected to power.

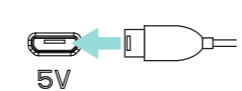

Note: When disconnected from power, the clock will remember its set clock time and the state of the diffuser and LED light ON/OFF as long as it has battery remaining. If the battery dies completely, you will need to re-set the clock after recharging the diffuser.


Setting the Clock & Alarm Times

Connect to power.

- Press the **SET** button. The **time** hour digits will begin blinking.
- Press the **▲▼** buttons to adjust the **time** hour digit. The clock will display the "PM" icon if the hour is in PM.
- Press the **SET** button again. The **time** minute digits will begin blinking.
- Press the **▲▼** buttons to adjust the **time** minute digit.
- When finished adjusting the minutes, **press + hold** the **SET** button to save the time. Now, short press the **SET** button a 3rd time. The **alarm** hour digit will now begin blinking.
- Press the **▲▼** buttons to adjust the **alarm** hour digit. The clock will display the "PM" icon if the hour is in PM.
- Press the **SET** button again. The **alarm** minute digits will begin blinking.
- Press the **▲▼** buttons to adjust the **alarm** minute digit.
- When finished adjusting the minutes, **press + hold** the **SET** button to save.

Turning the Alarm ON/OFF

- Press + hold the **▲**/ALARM button to turn the alarm ON/OFF. The alarm icon on the clock display will light up to indicate that the alarm is activated.
- When the alarm is ringing, press any button under the clock display to SNOOZE for 5 minutes.
- To turn the alarm off completely, press + hold the UP button. The alarm icon on the clock display will turn OFF, indicating that the alarm is OFF.

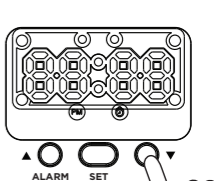

Note: If no button is pressed when the alarm starts ringing, it will turn off after 30 seconds and will not enter snooze mode.

See instructions for using the LED lights on the next page.

(Inside)