# PackardHome Smart Security Bundle

PBH100K Quick Start Guide

#### **Getting Started**

The PackardHome Smart Security Bundle works together with the **PackardHome** mobile app for Android and iOS devices. Please check that your Wi-Fi router is working properly and that the Wi-Fi network you are connected to is a 2.4GHz channel, with WPA/WPA2 encryption.

→ YOUR WIRELESS\_2.4G

→ YOUR WIRELESS\_5G

Additionally, you will need the following items to complete setup for the security kit:

#### **PBH201**

AAA-sized Alkaline batteries (x2)

#### **PBH301**

- AA-sized Alkaline batteries (x3)
- Screw driver, to install the sensor wall mount
- Power drill, if installing the wall mount on a brick or concrete surface







PackardHome Android 4.03+ iOS 8.0+

#### Setting Up PackardHome

1. Download and install the **PackardHome** app from the **Apple App Store** or the **Google Play Store**.

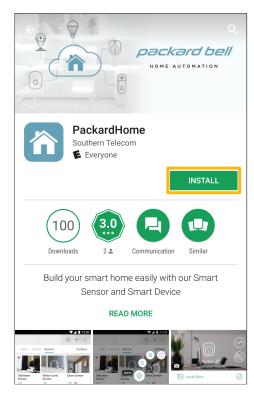

2. Launch the **PackardHome** app.

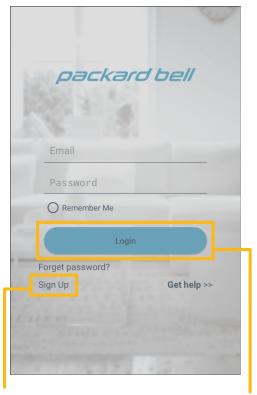

3. **Create a new account and login** or *login to your existing account*.


#### Before You Begin...

- It is recommended that you move to the location you intend on placing the device when you connect them to your PackardHome network because the PackardHome items require a stable Wi-Fi connection to properly operate.
- Once connected, test them to make sure that they maintain the Wi-Fi connection by triggering their sensor or turning them on/off before you place or install them.
- It is important that you leave all of the devices unpowered before starting the connection process. If they are plugged in, unplug them; if they have batteries inserted, remove them!
- Each of the PackardHome items comes with a QR code card but also has the QR code printed on the item itself. These are used for the connecting processes, detailed below.

#### Connecting the PBH101 Socket

You may use the QR code on the included QR code card **or** the QR code printed on the underside of the device:



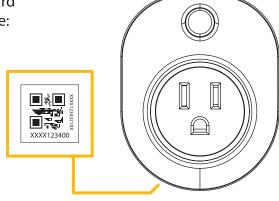


1. Open the **PackardHome** app and tap the **Device** tab 2. Swipe to the **Socket** page and tap the + at the top at the bottom of the screen.



of the screen.



3. Follow the instructions on screen to set up the device.

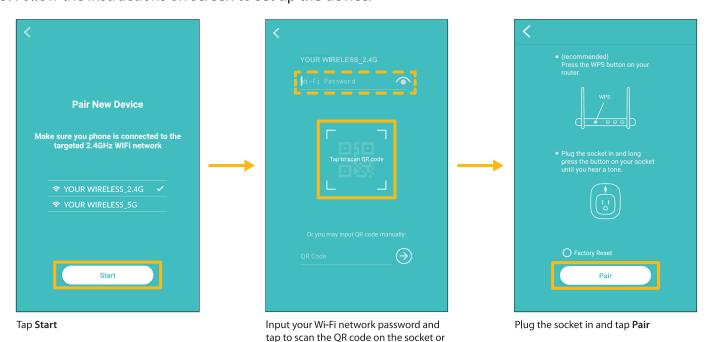

from the corresponding QR code card

### Connecting the PBH201

Remove the screw on the face of the PBH201 and pull off the cover. On the inside of the cover is a QR code used for the connection process. **Have 2 AAA-Sized alkaline batteries ready** to power the PBH201 sensors.

- 1. Open the **PackardHome** app and tap the **Device** tab at the bottom of the screen.
- 2. Swipe to the **Sensor** page and tap the + at the top of the screen.
- 3. Follow the instructions on screen to set up the device.




When finished, screw the cover back onto the unit.

## Placing the PBH201 Sensors

- 1. Remove one side of the large included sticky tape and press against the back of the main unit.
- 2. Remove the other side of the sticky tape and press against the surface or area you intend on placing the sensor.
- 3. Repeat the above steps with the magnet unit.


When placing the sensor, make sure that the two pieces are properly aligned.

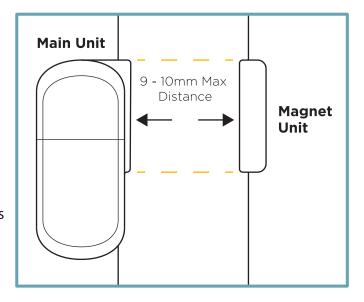

### Connecting the PBH301

Unscrew the screw on the back of the sensor and slide the cover off of the PBH301. On the bottom of the sensor is a QR code, used for the connection process. **Have 3 AA-Sized alkaline batteries ready** to power the PBH301 sensor.

- 1. Open the **PackardHome** app and tap the **Device** tab at the bottom of the screen.
- 2. Swipe to the **Sensor** page and tap the + at the top of the screen.
- 3. Follow the instructions on screen to set up the device.

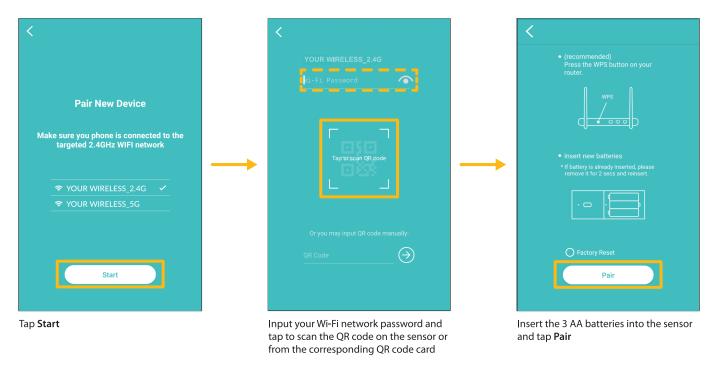

When finished slide the comparment shut and screw the cover back into place.

#### Installing the PBH301's Wall Mount

If installing to a wood surface:

- 1. Place the mount against the wood surface.
- 2. Using a screwdriver or power drill, drill the 2 included mounting screws through the wall mount's screw holes.
- 3. Make sure the wall mount is secure, then slide the PBH301 sensor into the wall mount.

If installing to a brick or concrete surface:

- 1. Place the wall mount against the wall. Mark the location of the two screw holes with a pencil.
- 2. Using a power drill, drill two holes into the surface at the pencil-marked locations.
- 3. Insert included plastic wall anchors into the drilled holes.
- 4. Place the wall mount back over the anchors and drill the 2 included mounting screws into place.
- 5. Make sure the wall mount is secure, then slide the PBH301 sensor into the wall mount.

